



①

Power Jumper Settings

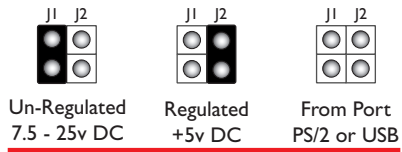


②

 Touch Screen and Communication Jumper Settings



④

Communication Cable Connections

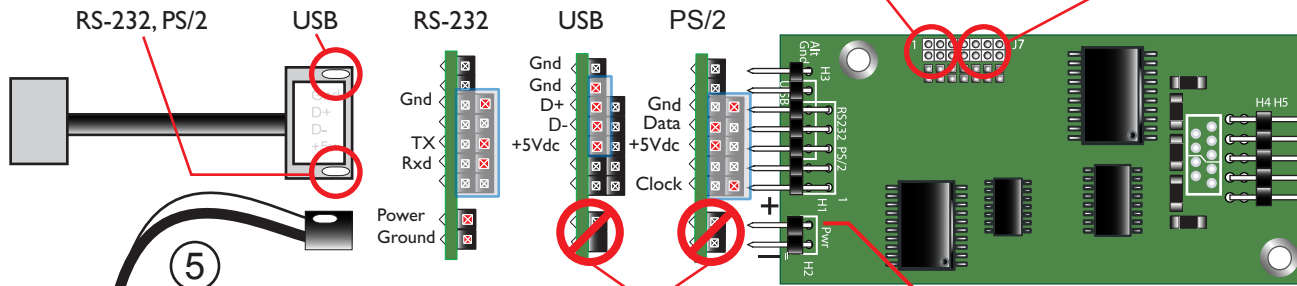

IMPORTANT! Do NOT connect external power supply when using USB or PS/2.

Power connection for RS-232 only.

③

Touch Screen Cable
5-wire touch screen connection header

⑤

Power Supply

